
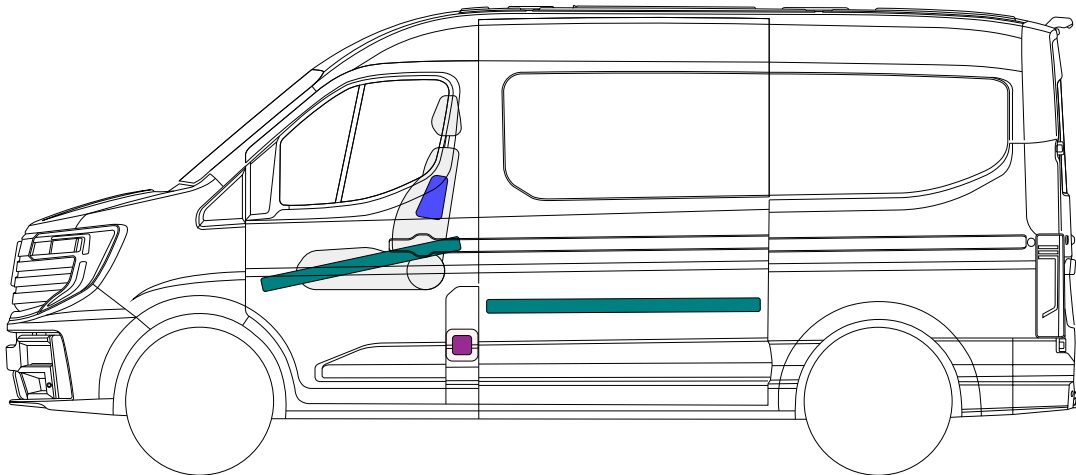



 
 



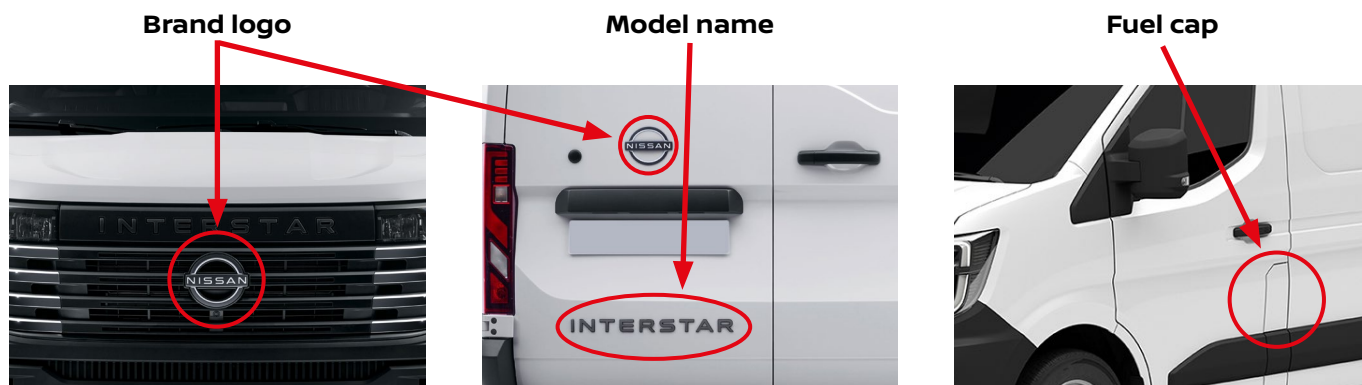


Nissan
Interstar
 TYPE: XDD, all types
 (2024 -)

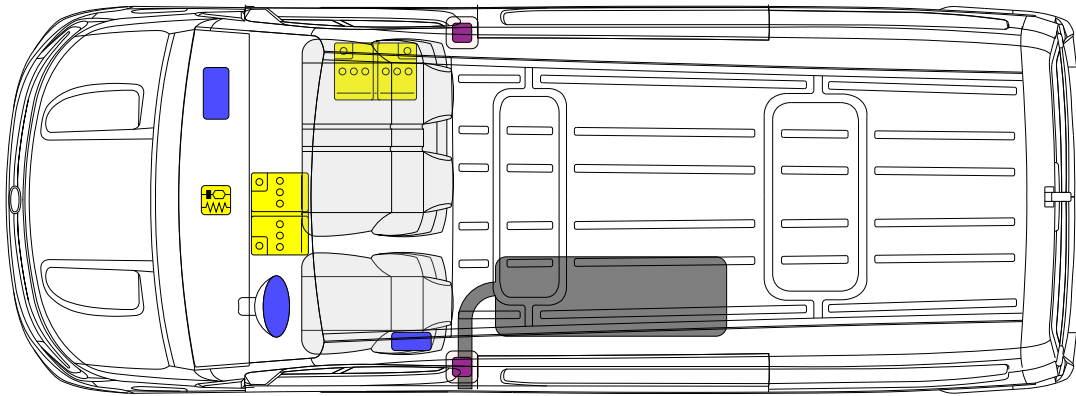

 Airbag	 Seat belt pretensioner	 SRS control unit	 Battery low voltage	 Fuel tank content Diesel
 High strength zone				


1. Identification / recognition



2. Immobilisation / stabilisation / lifting


Immobilise vehicle:

1. Block wheels, apply parking brake and push the P (park) button to select the P (park) position

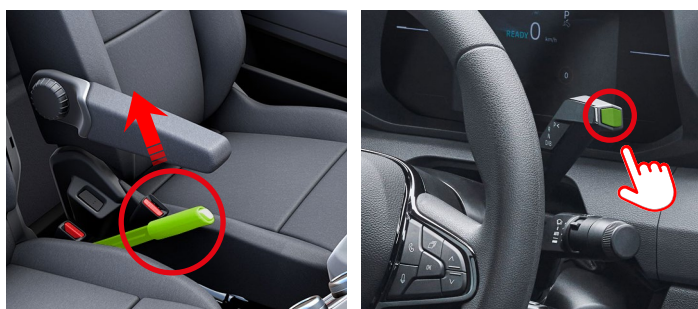


Lifting points:

 Appropriate lifting points

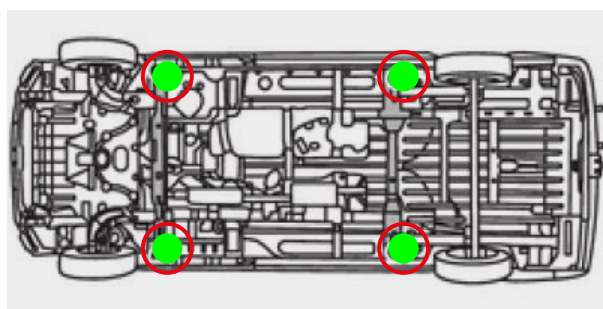


3. Disable direct hazards / Safety regulations

 1. Switch the ignition key to the 'OFF' position and remove it or push the Start/Stop button once. Then, remove the electronic key and keep at least 16 ft. (5 m) away from the vehicle.



 2. Disconnect 12 Volt battery



4. Access to the occupants

Steering column adjustment




Seat adjustment



Glass types

A. Laminated glass

B. Tempered glass

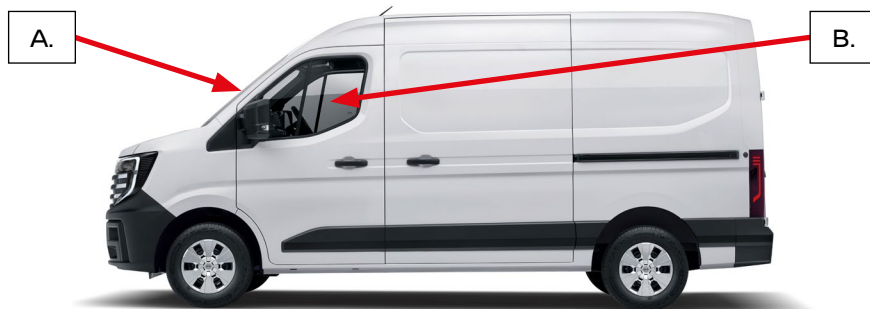

5. Stored energy / Liquids / Gases / Solids

	12V	
	R-1234yf 520 +/- 30 g	
	80 L	

6. In case of fire



GAS STRUT, RISK OF MISSILE EFFECT



Responders should always protect themselves with Personal Protective Equipment (PPE), including a Self-Contained Breathing Apparatus (SCBA), and take appropriate measures to protect civilians downwind from the incident.

8. Towing / transportation / storage

Recovery hook storage



Location front hook



Location rear hook



Towing



10. Explanation of pictograms used

	Remove smart key		Flammable
	Caution		Hazardous to the human health
	Warning; low temperature		Explosive
	Air-conditioning component		Corrosives
	Vehicle on fuel of liquid group 1		